

Parts Legend

- Barrel
- 2 Front Sight Ramp
- Front Sight Blade
- Front Sight Blade Spring
- Front Sight Pin
- Front Sight Blade Spring
- Front Sight Ramp Washer 7
- Front Sight Ramp Nut
- 9 Rear Sight Base
- Rear Sight blade 10
- Rear Sight Screw 11
- Clamp Ring
- Rear Sight Base Nut 13
- Mainspring 14
- Receiver 15
- Scope Mount Filler 16 Screws
- 17 Bolt-stop
- 18 **Bolt-stop Spring**
- 19 Safety Catch Spring Screw
- Safety Catch Spring 20
- Safety Catch Retaining Screw
- Trigger Guard 22
- 23 Sear
- Sear Spring 24
- Sear Pin
- Safety Catch Slide

- 27 Trigger Return Spring
- 28 Slide Leaf
- 29 Trigger Housing Pins
- Set Trigger Sear Lever
- 31 Set Trigger Sear Lever Pin
- 32 Circlips
- 33 Trigger Stop Pin
- 34 Trigger Pins
- Trigger Housing 35
- 36 Trigger Adjusting Screw
- 37 Standard Trigger
- 38 Set Trigger
- 39 Trigger Coupling Link
- 40 Internal Set Trigger Spring
- 41 External Set Trigger Spring
- Trigger Coupling Link Spacer
- 43 Locking Screw
- 44 Trigger Coupling Pin
- 45 Set Trigger Insert
- 46 **Bolt Body**
- 47 **Bolt Handle**
- 48 Bolt Handle Pin
- 49 **Bolt Handle Key**
- Striker 50
- 51 Bolt End Cap
- 52 Bolt End Cap Pin
- Bolt End Cap Detent Spring
- Bolt End Cap Detent 54
- **Bolt Guide**

- Blanking Screw
- 57 **Bolt Guide Sleeve**
- **Bolt Guide Washer**
- Striker Circlip
- 60 Extractor 61 **Ejector**
- 62
- **Ejector Spring**
- Ejector Pin 63
- Magazine Body
- Magazine End Cap
- 66 Magazine End Cap Screw Magazine Rotor Axis Pin
- 68 Magazine Follower Spring
- 69 Magazine Catch Spring
- Left Magazine Catch
- 71 Right Magazine Catch
- Magazine Follower
- 73 Front Trigger Guard Screw
- Rear Trigger Guard Screw
- Front Trigger Guard Screw Bushing
- 76 Rear Trigger Guard Screw Bushing
- 77 Stock
- 78 Forend Tip
- Forend Tip Screw
- Forend Tip Screw Nut 80
- 81 Slina Swivel Stud
- 82 Sling Swivel
- Swivel Spring Washer 83
- Sling Swivel Screw

- Front Scope Mount Base
- Rear Scope Mount Base 86
- Scope Mount Base Screws
- Front Scope Rings 88
- Rear Scope Rings 89
- 90 Scope Ring Screws
- Windage Base 91
- Windage Base Screws
- Rear Scope Mount Slide
- 94 Windage Slide Spring
- 95 Rear Mount Slide Springs
- Front Mounting Rail Base 96
- Rear Mounting Rail Base
- **Dovetail Base Screws**
- 99 Standard Trigger Housing
- 100
- Standard Trigger Sear Lever
- 101 Single Trigger
- Standard Trigger Set Screw
- 103 Standard Trigger Housing
- 104 Standard Trigger Spring
- Standard Trigger 105 Adjusting Screw
- 106 Standard Trigger
- **Eccentric Screw**
- 107 Standard Trigger
- Eccentric Screw Net
- 108 Standard Trigger